


Premier Equestrian Post Standard Assembly Instructions

Step One

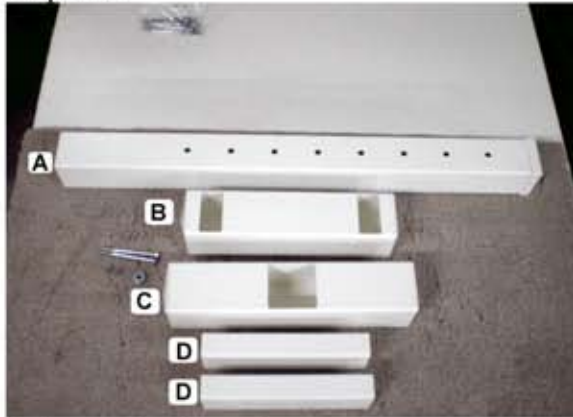


1. Lay out parts as shown.

Step Two




1. Insert Part A (cap side up) into Part C.

Step Three

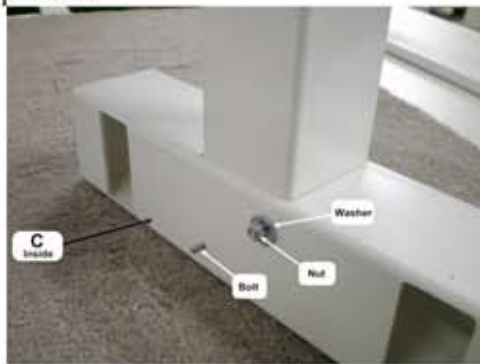


1. Insert bolt in each hole of C
2. Put a washer on the end of each bolt
3. Put a nut on the end of each bolt
4. Tighten

Step Four

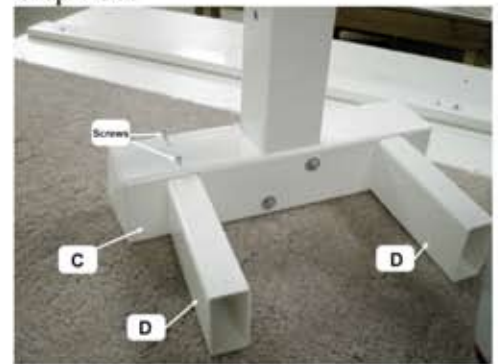


1. Insert one D in each slot on C
2. Insert two screws in the holes above each D on part C
3. Tighten

Step Five

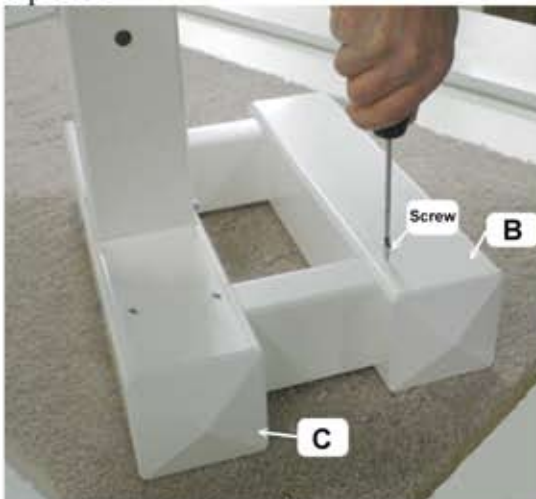

1. Place B onto the assembly
2. Put screws in holes on part B
3. Tighten

Step 6

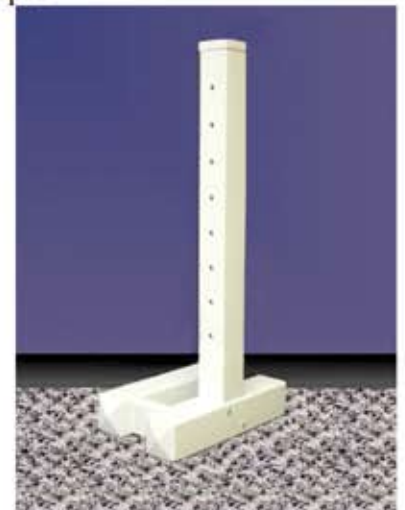

1. Repeat steps 1 – 5 for each post standard